
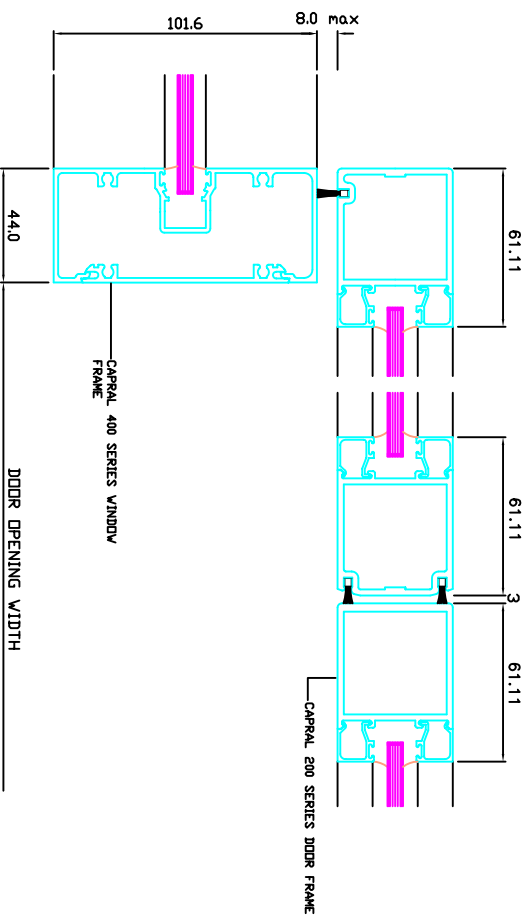


Fix channel to full length of door ensuring that clamp pieces are in channel prior to fixing channel.
 Hangers should be fixed in place near end of door. Where lock is fitted, ensure hangers line up with lock tongues.

Make door height as follows:
 finished floor level to underside of fascia / transom + 45mm

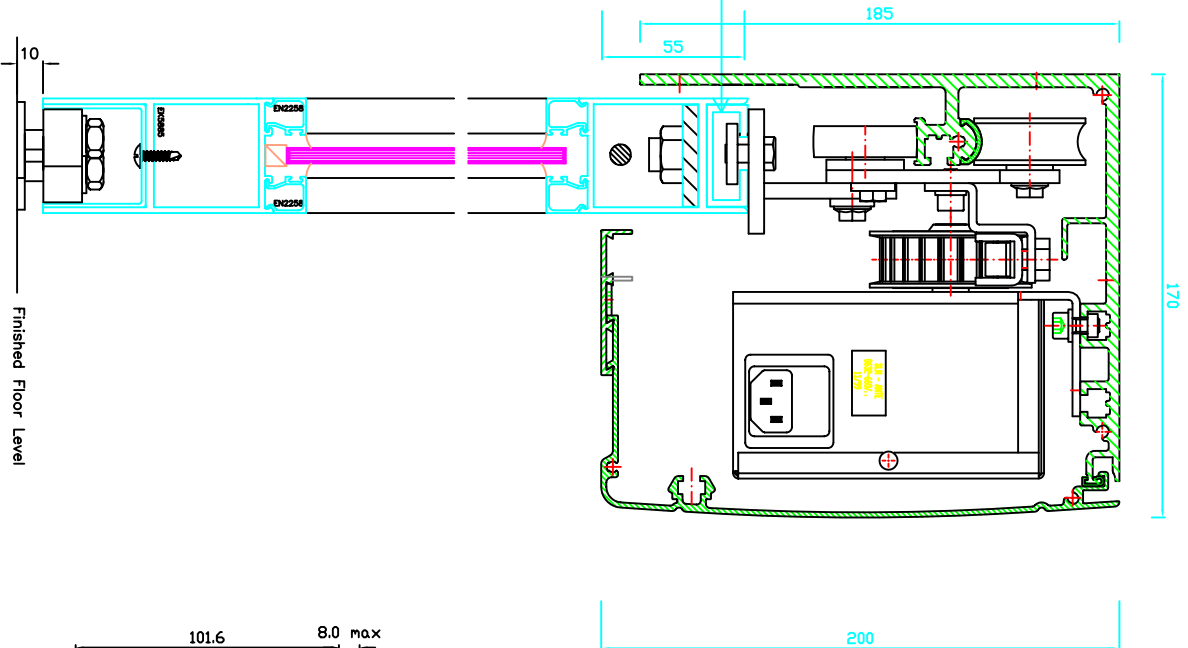

DOORWAYS PTY LTD ABN: 14 070 034 287
 10 SILICON PLAGE
 TULLAMARINE, VICTORIA 3043
 TEL: + 61 3 9338 9898
 FAX: + 61 3 9338 9191

MODEL:	SIM Sliding (Bi-part & Single) Aluminium frame installation	PROJECT:		Drawn:	GW
				Date:	26-Aug-07
				Scale:	1:20
				Dwg no:	KSLM-A01