


Fix channel to full length of door ensuring that clamp pieces are in channel prior to fixing channel.  
 Hangers should be fixed in place near end of door. Where lock is fitted, ensure hangers line up with lock tongues.

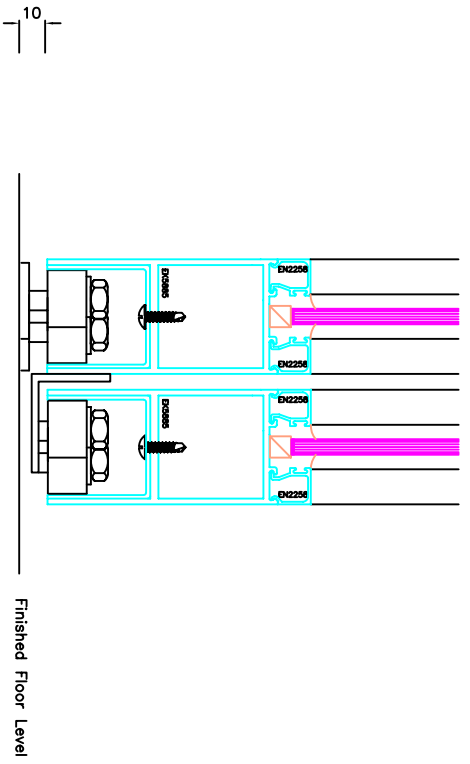

DOORWAYS PTY LTD ABN: 14 070 054 287  
 10 SILICON PLACE  
 TULLAMARINE, VICTORIA 3043  
 TEL: + 61 3 9338 9898  
 FAX: + 61 3 9338 9191

MODEL:	SLM Telescoping – with Support Beam	PROJECT:		Drawn:	GW
	Aluminium frame installation			Date:	1 Jan-05
				Scale:	1:20
				Dwg no:	KSLMT02